


SUCCESSIONE DI MONTAGGIO
SEQUENCE DE MONTAGE
SEQUENCE OF ASSEMBLAGE

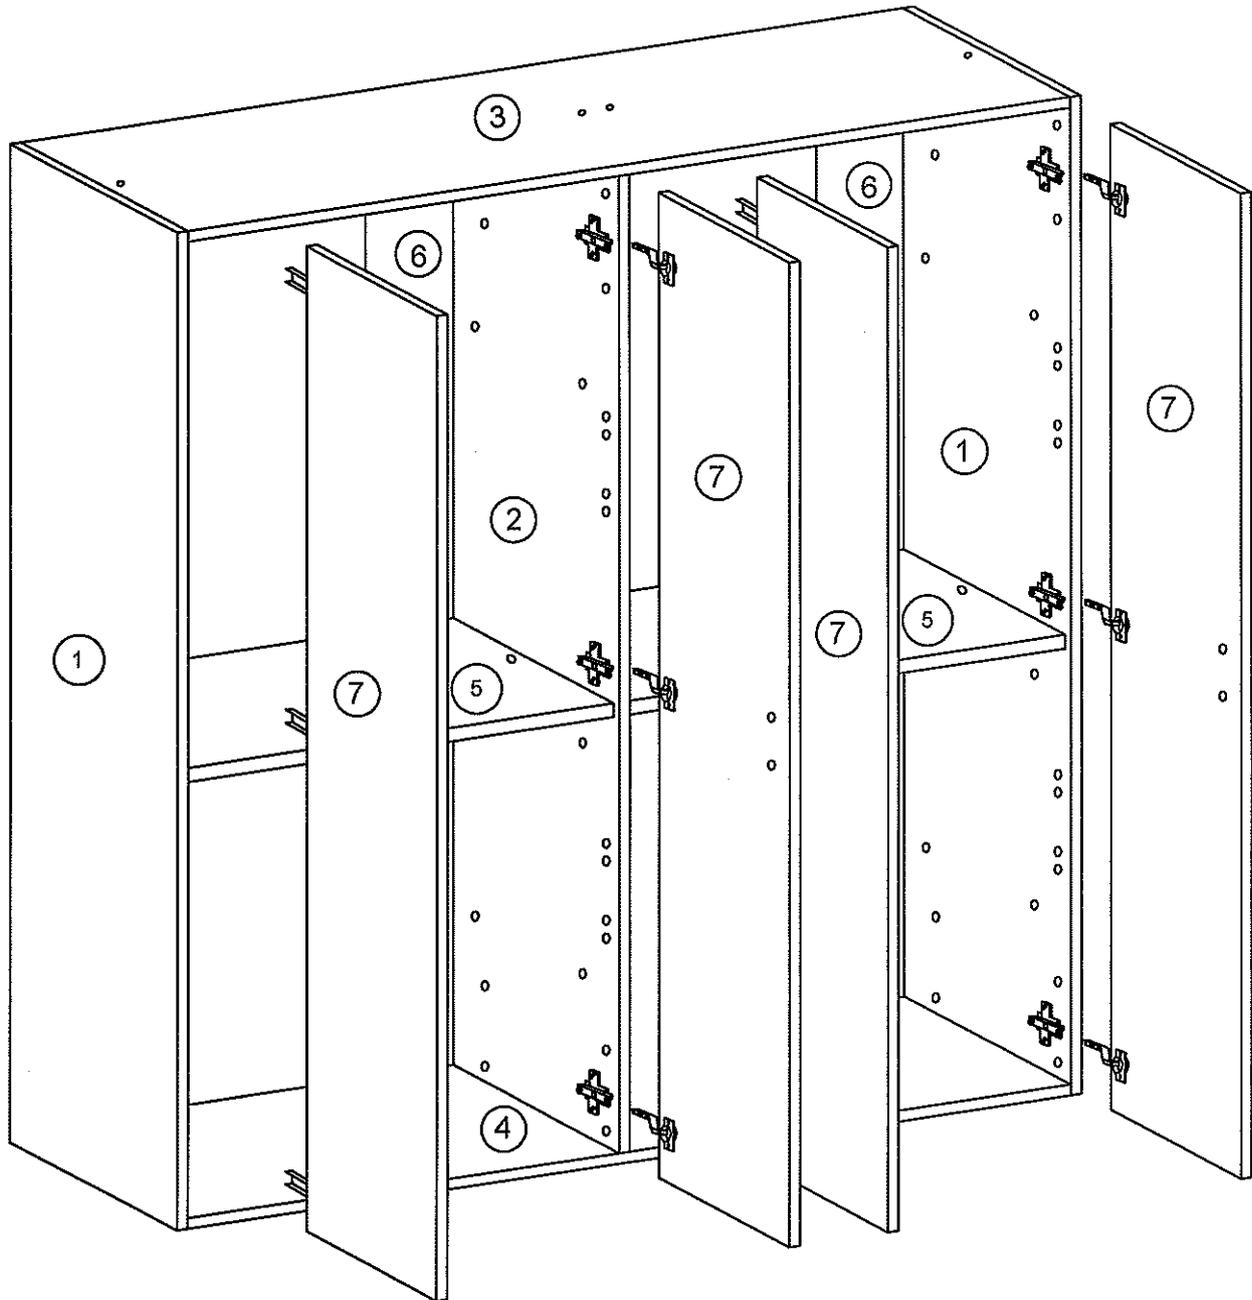

- ① Fianco
Côté
Side
- ② Tramezzo
Partition
Cloison
- ③ Cielo
Top
Top
- ④ Fondo
Base
Base
- ⑤ Ripiano
Etagère
Shelf
- ⑥ Schienale doppio
Fond double
Backside double
- ⑦ Ante
Portes
Doors


MOD. SMALL

ARMADIO BATTENTE 4 ANTE

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MANTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO

PACCO 1-2


Pag. 2

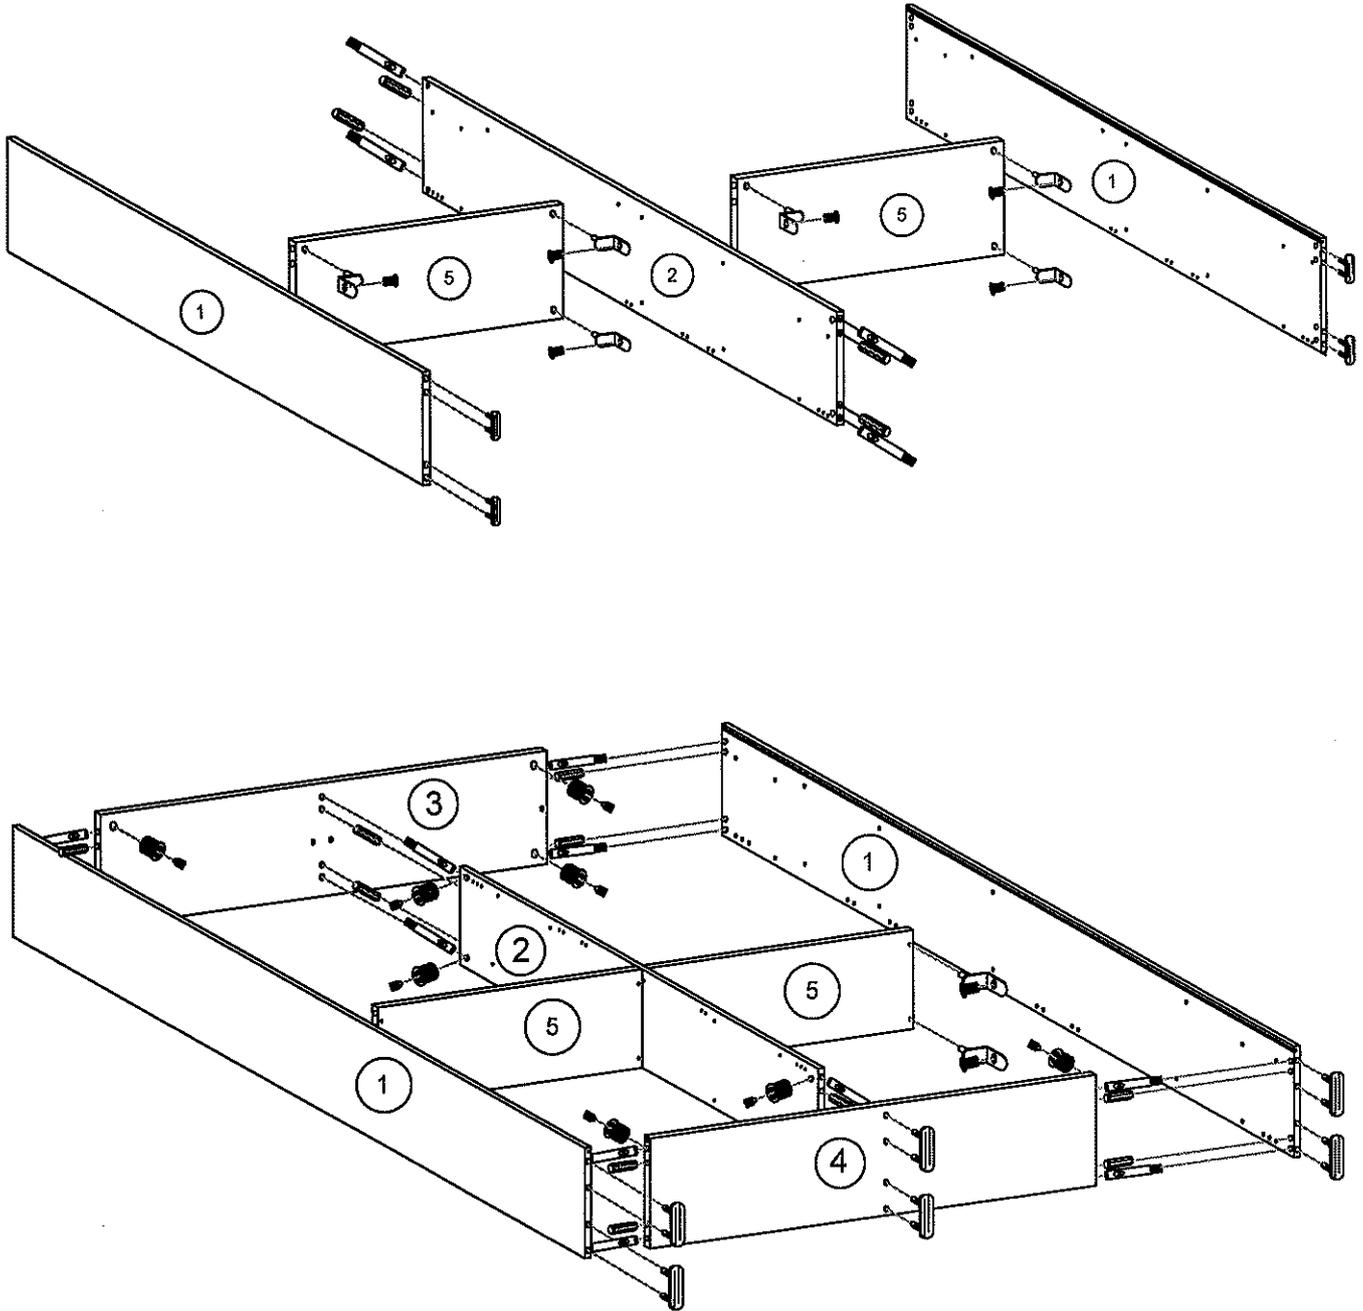


Quincaillerie

Beschlage

Hardware



A x 12



B x 12





D x 12



C x 12



S x 6

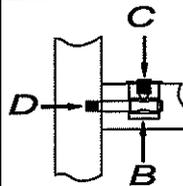

R x 8

P9 x 8





Vite euro

MOD. SMALL

ARMADIO BATTENTE 4 ANTE


NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MANTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO

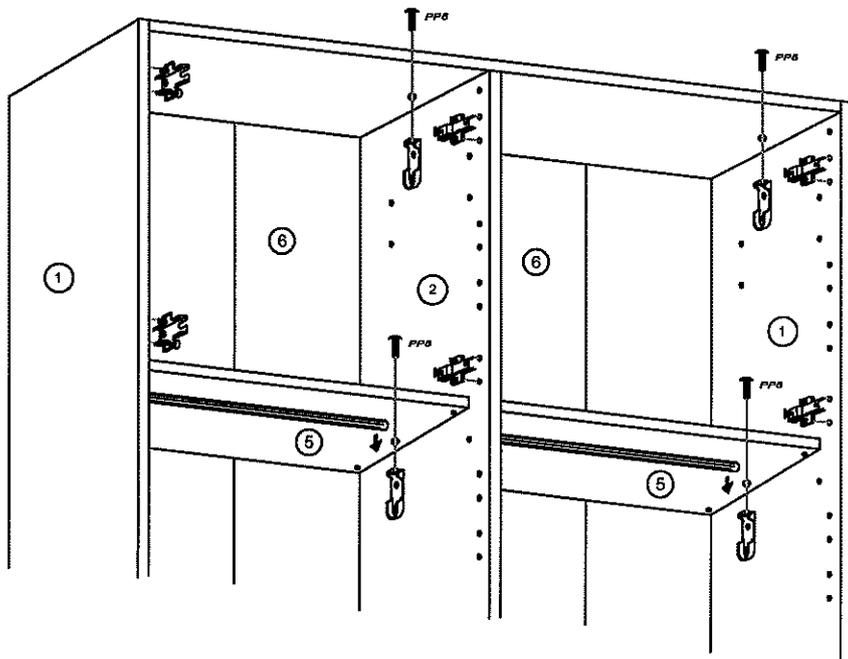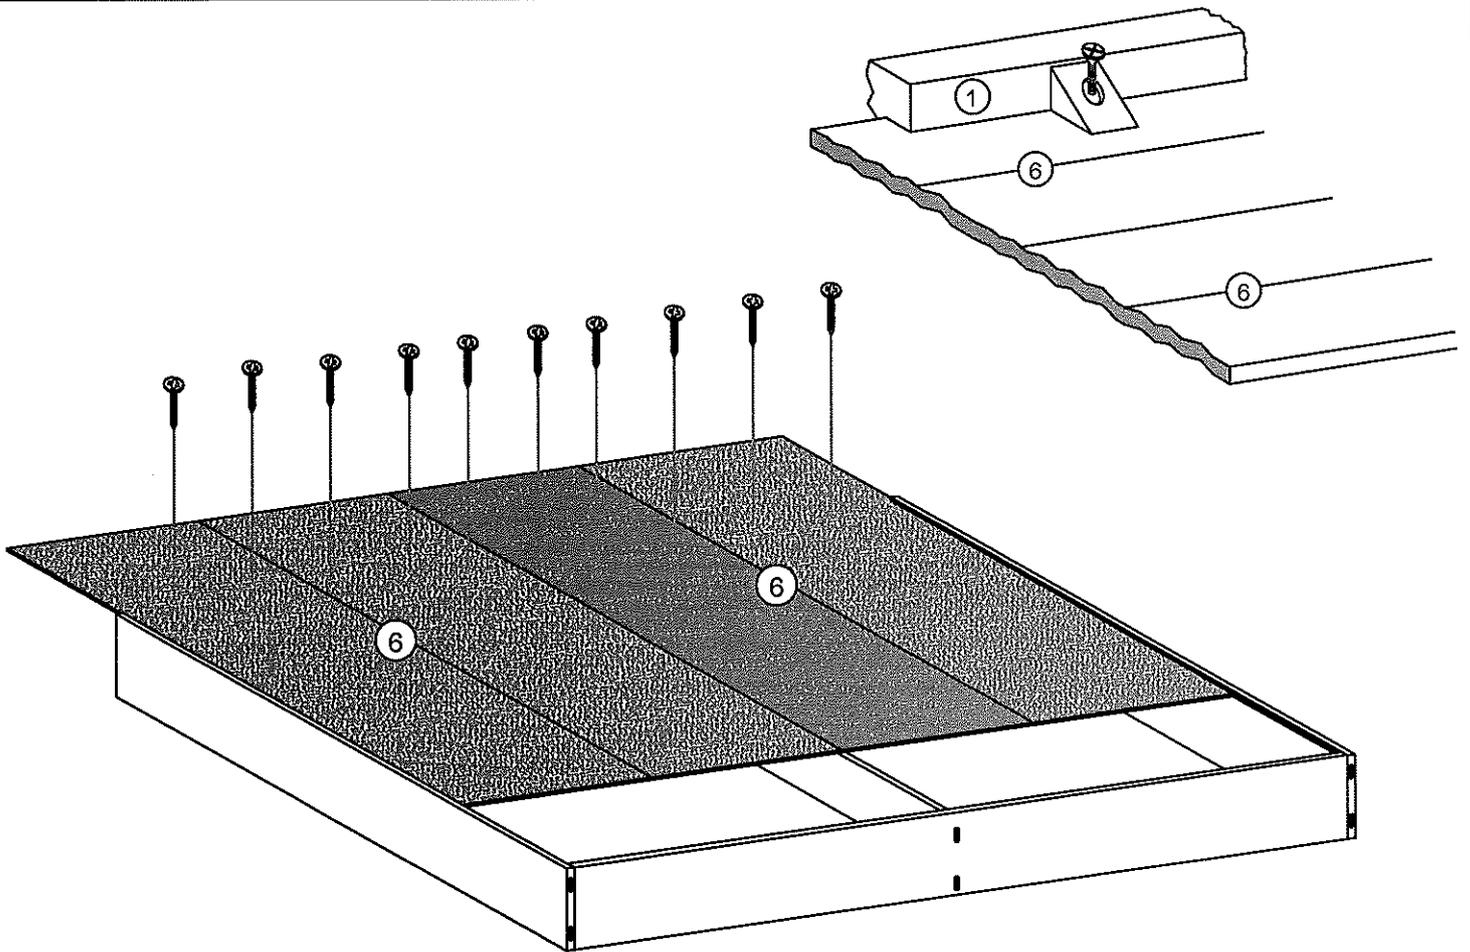

Quincaillerie

Beschlage

Hardware





J x 8

PP5 X 8



Vite tbi 6MAX25

BB

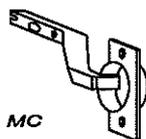

MC

H x 10



Vite tc 3,9x15

W x 20



P1 x 40



Vite tps 3,5x15

Per posizionare maniglia, sfondare con il trapano (punta diametro 5) i fori corrispondenti posizionando una tavoletta di legno nel lato opposto, facendo pressione per evitare rottura della superficie dell'anta in prossimità dei fori.

